




User Manual
High Jack stand
Type - JS12H

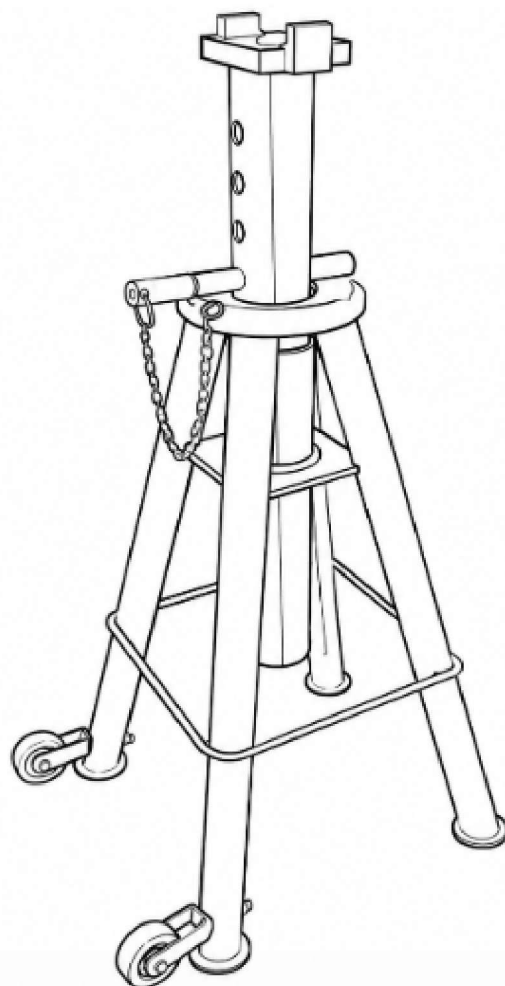

Read this manual carefully before using the high Jack stand.

Table of contents	Page
1. General information	3
1.1 Introduction	3
2. Model information	3
3. Symbols	4
4. Safety information	5
4.1 Warnings	6
5. Instructions for use	7
6. Preventive maintenance	7
7. Warranty	8

© **2026 Mammuth**. All rights reserved. No part of this publication may be reproduced, stored in an automated data file, or made public in any way without the express prior written permission of the publisher, except as provided by law.

1. General information

1.1 Introduction

The Mammuth JS12H is a robust high Jack stand stand for safely supporting vehicles and other suitable loads. The high Jack stand stand has a maximum load capacity of 12,000 kg per support and is adjustable in 10 height positions from 725 to 1200 mm. The desired working height is set using the adjustable support tube and securely locked in place with the locking pin. The wide construction ensures stable support on a hard and flat surface.

Read this manual carefully before using the product. Protect yourself and others by observing all safety information, warnings, and precautions. Failure to follow the instructions may result in personal injury and/or damage to the product or property. Always keep these instructions with the product.

2. Model information

MODEL: JS12H

Load capacity: 12,000 kg per support

Number of height positions: 10

Height range: 725 to 1200 mm

Weight: 24 kg

Batch number: see product



3. Symbols



ISO 7010 - M002

Read the user manual before use.



Always use two high Jack stand stands to support a vehicle.



ISO 7010 - P069

User maintenance prohibited.



Do not work on a sloping or uneven surface.
Use the high Jack stand stands only on a flat surface.



It is forbidden to use the high Jack stand stands if they are damaged or broken.



It is prohibited to move the load when it is resting on the high Jack stand stands.



Ensure that the center of gravity of the load is always evenly distributed on the saddle of the high Jack stand stand.

4. Safety information


- Do not exceed the maximum load capacity.
- Use the high Jack stand exclusively on a hard, flat, and sufficiently load-bearing surface.
- Do not adjust under load.
- Not intended for long-term support without additional security.
- Place the load centered on the support plate.
- Always use the stands in pairs to stabilize the vehicle before performing repairs.
- Failure to follow these instructions may result in personal injury and/or property damage.
- No modifications may be made to this product.
- Wear approved safety glasses and sturdy work gloves during assembly and use.
- Use only in combination with a suitable lifting device. The high Jack stand is not intended for lifting a vehicle.
- Check before each use; do not use if parts are loose or damaged.
- Sudden movements of the load can cause temporary overloading, which can lead to failure of the high Jack stand support.
- Assemble exclusively according to these instructions. Incorrect assembly can cause dangerous situations.
- Keep the installation area clean and well lit.
- Keep bystanders away during use.
- Do not use the high Jack stand rest when you are fatigued or under the influence of alcohol, drugs, or medication that may affect your reaction time.
- The load capacity and other product specifications apply only to a correctly and fully assembled product.
- Check that the lifting device is suitable for at least the weight of the load, functions properly, and is securely locked before using the support.
- This product is not a toy. Do not let children play with or near this product.
- Keep the product label clean and legible. It contains important product and safety information.

4.1 Warnings

- WARNING: Never exceed the maximum load capacity of 12,000 kg per high Jack stand stand.
- WARNING: Use the high Jack stand stand only on a hard, flat, and sufficiently load-bearing surface.
- WARNING: Always use two high Jack stand stands to stably support a vehicle.
- WARNING: Install the high Jack stand stands exclusively under the suitable support points indicated by the vehicle manufacturer.
- WARNING: Ensure that the load always rests centered on the saddle of the high Jack stand stand.
- WARNING: Never adjust the height of the high Jack stand stand when it is loaded. Set the desired height before lowering the load onto the high Jack stand stand.
- WARNING: Never load the high Jack stand stand when the locking pin is not fully inserted and correctly secured.
- WARNING: Do not use the high Jack stand stand if parts are damaged, deformed, loose, or missing.
- WARNING: Do not move or displace the vehicle or the load when it is resting on the high Jack stand stands.
- WARNING: Avoid sudden or shock loads. Always lower the load slowly and in a controlled manner onto the high Jack stand stands.
- WARNING: Ensure the vehicle is secured against rolling, tilting, and shifting before installing the high Jack stand stands.
- WARNING: Do not crawl under the load while installing or removing the high Jack stand stands.
- WARNING: Do not work under the vehicle until it has been verified that the vehicle rests fully and stably on the correctly positioned high Jack stand stands.
- WARNING: Do not modify the high Jack stand stand and use only original or approved parts.
- WARNING: Do not use the high Jack stand rest when you are fatigued or under the influence of alcohol, drugs, or medication that may affect your reaction time.
- WARNING: Do not use the high Jack stand stands for prolonged or permanent support of a vehicle or load.

5. Instructions for use

1. Ensure that the workplace is clean and free of dirt and obstacles.
2. Use the high Jack stand exclusively on a hard, flat, and sufficiently load-bearing surface.
3. Block the wheels of the vehicle that are not being lifted. Ensure that the handbrake is engaged and that the transmission is in "P" or in gear in a manual car.
4. Lift the vehicle to a safe working height and check that the jack and vehicle setup are stable before positioning the high Jack stand stands.
5. Place the high Jack stand stands directly under the suitable support points indicated by the vehicle manufacturer.
6. Adjust the support columns as high as possible without the saddles making contact with the load. Fully insert the locking pin and check that it is correctly secured.
7. Lower the load slowly and carefully onto the high Jack stand stands. Shock loading or suddenly dropped loads can cause premature metal fatigue or even failure of the stand, depending on the weight of the vehicle and the speed of lowering.
8. When the work is completed, lift the load sufficiently so that the supports can be easily removed.

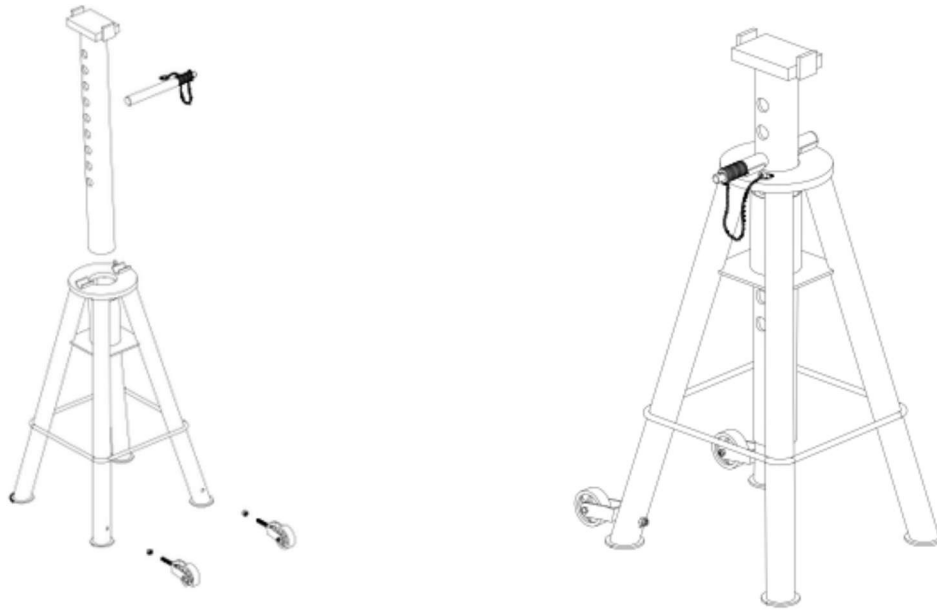

6. Preventive maintenance

1. Always store the high Jack stand stands in a well-protected place where they are not exposed to bad weather, corrosive fumes, abrasive dust, or other harmful conditions. Clean the stands of water, snow, sand, dirt, oil, grease, and other contaminants before use.
2. The owner is responsible for keeping the labels clean and legible. Use a mild soap solution to clean the outside of the supports.
3. Check the mounts before each use. Do not use the mounts if parts are cracked, bent, or broken. Also, do not use the mount if mounting hardware is missing or loose, or if the product has been modified. Have repairs performed by an authorized dealer using original parts before the mount is used again. Wear or damage caused by missing or loose parts is not covered by the warranty.

7. Warranty

Warranty Terms and Conditions

1. This warranty shall enter into force on the date stated on the original purchase invoice and shall remain valid for a period of twelve (12) months.
2. This warranty is non-transferable unless prior written consent has been obtained from the supplier.
3. Warranty claims will not be accepted without presentation of the original purchase invoice.
4. This warranty shall apply exclusively provided that the product has been used in full compliance with the instructions contained in the user manual and solely for its intended purpose.
5. No alterations, modifications, or technical changes may be made to the product.
6. This warranty shall be void in the event of improper, negligent, or incorrect use of the product.
7. Transportation, shipping, and related costs are expressly excluded from this warranty.
8. Any repair work must be carried out exclusively by the supplier or an authorised service partner. Repairs performed by unauthorised third parties shall immediately void all warranty rights.
9. Repairs performed during the warranty period shall not result in an extension of the original warranty period. However, a separate warranty period of three (3) months shall apply to the repaired components, provided that the original warranty period has expired.
10. All maintenance and servicing operations described in the user manual must be performed in a timely and proper manner. Failure to do so may result in the warranty becoming void.
11. Warranty claims may only be submitted to the original point of sale at which the product was purchased.