



User Manual

Degreaser Tray 14Ltr - Wall Model

Type PW10W



Read this manual carefully before using degreaser tray.

Table of contents	Page
1. Keeping the user manual	3
2. General description	4
3. Safety regulations	4
4. Environment & disposal	4
5. Application	4
6. Symbols	5
7. Parts	6-7
8. Parts list	8
9. Wall mounting	9
10. Installation	9
11. Filling & commissioning	9
12. Use	9
13. Fire safety	9
14. Maintenance & inspection	10
15. Troubleshooting & Solutions	10
16. Technical data	10
17. Guarantee	11
18. EC Declaration	12

1. Keep the user manual

Please keep this manual in a safe place. The information in this document may be necessary for installation, use, maintenance or troubleshooting.

Keep this manual readily available for future reference. This manual contains important safety instructions and legal information.

Keep this document for the entire life of the product. Always include the manual when reselling, transferring, or moving the product.

It is mandatory to keep this user manual in a centrally accessible location. Employees who work with this product must have access to the most recent version of this documentation at all times.



Dispose of electrical appliances in an environmentally friendly manner. Do not dispose of electrical appliances in household waste. In accordance with European Directive 2012/19/EU on electronic equipment, they must be collected separately for recycling. Contact your local authorities for available disposal options for your worn-out appliance.

© 2025 Mammuth All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means without the express prior written permission of the publisher, except in cases where legally permitted.

2. General description

The PW10W wall-mounted degreaser is a compact, wall-mounted washing and degreasing unit for cleaning metal parts. The degreaser is equipped with an electric circulation pump that circulates cleaning fluid over the workpiece through a flexible hose.

3. Safety regulations

- Don't overfill the solvent. Fill it to just below the level of the parts container.
- Do not use solvents with a flash point below 150°F (65°C).
- Use only petroleum- or biodegradable-based solvents approved for electrical parts washers.
- Use the appliance only in a well-ventilated area.
- Do not use while smoking.
- Do not use near heat sources such as heaters, sparks, open flames, etc.
- If a fire breaks out in the parts washer, do not attempt to move the appliance. The lid is equipped with a fuse and will close automatically to extinguish the flame.
- Do not adjust or block the lid to keep it in the open position.
- Replace damaged parts immediately.
- Only use a grounded 115 V / 60 Hz or 230 V / 50 Hz socket.

Important

- **Always close after use.**
- **Prohibited: leaving the degreaser container open unattended.**

Caution! The degreaser tray is intended for cleaning/degreasing parts with a suitable (preferably water-based), non-aggressive cleaning fluid with a flash point above 66.5°C. The fluid is circulated via a pump and nozzle/outlet.

4. Environment & disposal

Dispose of used degreasing agents according to applicable environmental regulations. Do not discharge into sewers.

5. Application

Suitable for:

Workshops and maintenance areas

- Cleaning metal parts
- Removing oil, grease and dirt

Not suitable for:

Flammable or explosive liquids

- Strongly corrosive agents
- Plastics that cannot withstand degreaser

6. Symbols



Mandatory: Wear gloves and safety glasses



Mandatory: Use ventilation / extraction
Warning of dangerous fumes



No smoking or open flames in the area




Warning for electricity
Unplug the power cord



General warning
Prevent overload

7. Parts

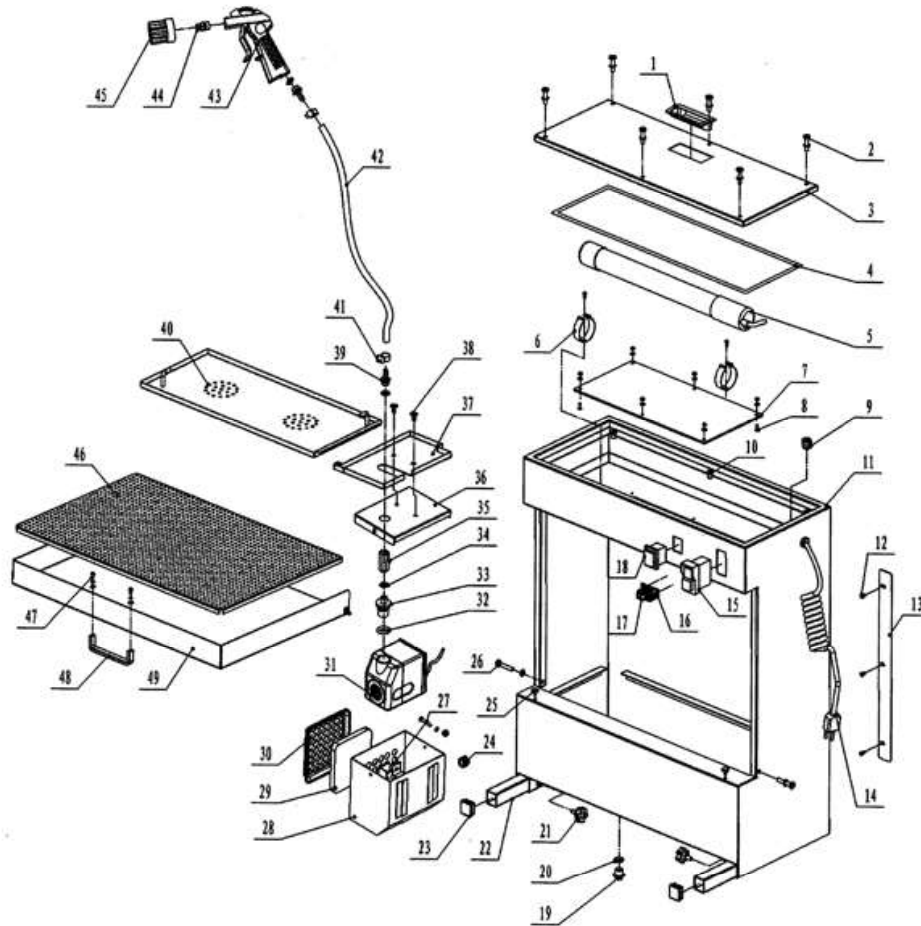

Part No.	Description	Specification	Number
1.	Plastic Knob	-	1
2.	Screw	M6*25	6
3.	Upper Cover	Q195	1
4.	Sealing Tape	-	1
5.	Lamp	-	1
6.	Lamp Holder Clamp	-	2
7.	Acrylic glass (PMMA)	-	1
8.	Screw	M4*12	6
9.	Cable gland	-	2
10.	Nut	M6	8
11.	Enclosure	-	1
12.	Screw	M4*8 Q195	3
13.	Cable fixing Plate	-	1
14.	Cable	KJD17	1
15.	Switch	-	1

Part No.	Description	Specification	Number
16.	Mounting plate	Q195	1
17.	Clamp	-	1
18.	Swith	KCD4	1
19.	Plug	-	1
20.	O-ring	-	1
21.	Handle bar	-	2
22.	Support handle	-	2
23.	Plug	-	2
24.	Cable sheath	-	1
25.	Rubber screw	-	2
26.	Screw	M6*35	2
27.	Screw	M5*20	1
28.	Pump housing	-	1
29.	Filter	-	1
30.	Filter cover	-	1
31.	Pump	AP2000	1
32.	O-ring	14*2.65	1
33.	Connector	-	1
34.	O-ring	10*2.65	3
35.	G1*/4 connector	G1/4*35	1
36.	Pump cover	-	1
37.	Right filtration plate	-	1
38.	Srew	M6*12	2
39.	Connector	-	1
40.	Left filtration plate	-	1
41.	Clamp	-	2
42.	Hose	-	1
43.	Cleaning gun	-	1
44.	Connector	-	1
45.	Brush	-	1
46.	Filtration plate	-	1
47.	Srew	-	2
48.	Handle	-	1
49.	Front door	-	1

8. Parts list

1.	PPW10W-01	Plastic Knob
2.	PPW10W-02	Screw
3	PPW10W-03	Upper Cover
4.	PPW10W-04	Sealing Tape
5.	PPW10W-05	Lamp
6.	PPW10W-06	Lamp Holder Clamp
7.	PPW10W-07	Acrylic glass (PMMA)
8.	PPW10W-08	Screw
9.	PPW10W-09	Cable gland
10.	PPW10W-10	Nut
11.	PPW10W-11	Enclosure
12.	PPW10W-12	Screw
13.	PPW10W-13	Cable fixing Plate
14.	PPW10W-14	Cable
15.	PPW10W-15	Switch
16.	PPW10W-16	Mounting plate
17.	PPW10W-17	Clamp
18.	PPW10W-18	Swith
19.	PPW10W-19	Plug
20.	PPW10W-20	O-ring
21.	PPW10W-21	Handle bar
22.	PPW10W-22	Support handle
23.	PPW10W-23	Plug
24.	PPW10W-24	Cable sheath
25.	PPW10W-25	Rubber srew
26.	PPW10W-26	Screw
27.	PPW10W-27	Screw
28.	PPW10W-28	Pump housing
29.	PPW10W-29	Filter
30.	PPW10W-30	Filter cover
31.	PPW10W-31	Pump
32.	PPW10W-32	O-ring
33.	PPW10W-33	Connector
34.	PPW10W-34	O-ring
35.	PPW10W-35	G1*/4 connector
36.	PPW10W-36	Pump cover
37.	PPW10W-37	Right filtration plate
38.	PPW10W-38	Srew
39.	PPW10W-39	Connector
40.	PPW10W-40	Left filtration plate
41.	PPW10W-41	Clamp
42.	PPW10W-42	Hose
43.	PPW10W-43	Cleaning gun
44.	PPW10W-44	Connector
45.	PPW10W-45	Brush
46.	PPW10W-46	Filtration plate
47.	PPW10W-47	Srew
48.	PPW10W-48	Handle
49.	PPW10W-49	Front door

9. Mounting (wall)

1. Mount the wall bracket on a load-bearing wall (concrete or steel construction).
2. Use suitable wedge bolts or plugs (min. load capacity according to specification).
3. Mount the degreaser tray securely to the bracket.
4. Check that the container is level.
5. Make sure the degreaser tray is hung at a comfortable working height.

⚠ *Wall mounting must always be carried out by qualified personnel.*

10. Installation

1. Place the filter correctly in the container.
2. Fill the container with a suitable degreasing agent to the maximum filling level.
3. Connect the plug to a grounded 230V connection.
4. Check for leaks before use.

11. Filling & commissioning

1. Fill with a suitable fluid until just below the parts shelf. We recommend EUROL HF Plus.
2. Make sure that the pump inlet is sufficiently submerged in liquid.
3. Connect to a grounded outlet.
4. Turn the switch to ON.

12. Use

1. Open the lid.
2. Place the part in the degreaser tray.
3. Turn the switch to ON.
4. Clean the part with the flexible rinse hose.
5. Let the liquid drain back into the container
6. Turn the switch to OFF after use.
7. Close the lid.
8. Clean up spilled liquid immediately.

13. Fire safety

- The lid holder contains a fuse that will close the lid in the event of a fire. This fuse is not resettable and must be replaced after activation.
- Do not place the unit near open flames, sparks or other flammable conditions.
- Closing the lid can limit the spread of fire.
- Make sure that appropriate fire extinguishing equipment is available at the degreaser tank.
- Close the lid after each use.

14. Maintenance & Inspection

- Always unplug before maintenance/cleaning.
- Clean the pump filter regularly (according to the instructions).
- Do not allow the fluid level to drop below the pump inlet.
- Repair/parts: only by authorized personnel and with original parts.
- Check regularly that all moving parts of the lid are functioning properly and that the lid can move freely without any blockages.
- Do not make any modifications to the lid, spring mechanism, or fusible link.
- Do not place any objects in or on the container that could prevent the lid from closing (completely).

15. Troubleshooting and solutions

Fault	Cause	Solution
Pump not working	No tension	Check plug/fuse
Low flow	Filter dirty	Clean filter
Poor cleaning	Fluid contaminated	Replace fluid
Leakage	Drain plug loose	Tighten

16. Technical data

- Overall dimensions: 560 × 545 × 630 mm
- Maximum solvent capacity: 14 liters
- Flow rate: 1.9 liters per minute
- Assets:
 - 43 W (120 V / 60 Hz)
 - 26 W (230 V / 50 Hz)
- Net weight: 24.5 kg

17. Garantie

Garantievoorwaarden

1. Deze garantie treedt in werking op de datum die vermeld staat op de originele aankoopfactuur en is geldig voor een periode van twaalf (12) maanden.
2. Deze garantie is niet overdraagbaar, tenzij voorafgaande schriftelijke toestemming is verkregen van de leverancier.
3. Zonder overlegging van de originele aankoopfactuur worden geen garantieclaims in behandeling genomen.
4. Deze garantie is uitsluitend van toepassing indien het product volledig conform de instructies in de gebruiksaanwijzing en uitsluitend voor het doel waarvoor het is ontworpen is gebruikt.
5. Aanpassingen, wijzigingen of technische veranderingen aan het product zijn niet toegestaan.
6. Deze garantie vervalt bij onoordeelkundig, nalatig of onjuist gebruik van het product.
7. Transport-, verzend- en aanverwante kosten vallen uitdrukkelijk buiten deze garantie.
8. Reparaties dienen uitsluitend te worden uitgevoerd door de leverancier of een geautoriseerde servicepartner. Reparaties die door onbevoegde derden worden uitgevoerd, doen onmiddellijk alle aanspraken op garantie vervallen.
9. Reparaties die tijdens de garantieperiode worden uitgevoerd, leiden niet tot verlenging van de oorspronkelijke garantieperiode. Indien de oorspronkelijke garantieperiode is verstreken, geldt wel een afzonderlijke garantieperiode van drie (3) maanden op de uitgevoerde reparatie.
10. Alle onderhouds- en servicewerkzaamheden zoals beschreven in de gebruiksaanwijzing dienen tijdig en correct te worden uitgevoerd. Het niet naleven hiervan kan leiden tot het vervallen van de garantie.
11. Garantieclaims kunnen uitsluitend worden ingediend bij het oorspronkelijke verkooppunt waar het product is aangeschaft.

18. EG-Verklaring

***EG-verklaring van overeenstemming - Declaration of conformity –
Konformitätsverklärung - Declaration de conformite - Dichiarazione di
conformita- Declaracion de conformidad***

Wij, We,Wir,Nous,**Valkenpower BV, Haverkamp 11, 6051 AC Maasbracht, Nederland**, verklaren geheel onder eigen verantwoordelijkheid dat de producten, declare under our sole responsibility that the products, erklären in voller eigener Verantwortung, dass die Produkte, déclarons sous notre entière responsabilité que les produits

Type Model Art Type	Beschrijving Description Beschreibung Description	Merk Brand Marke Marque
PW10W	Ontvetterbak 14 ltr	Mammuth
PW10W	Degreasing tank	Mammuth
PW10W	Entfettungswanne	Mammuth
PW10W	Cuve de dégraissage	Mammuth

Waarop deze verklaring betrekking heeft, in overeenstemming zijn met de volgende normen:To which this declaration relates, are in conformity with the following standards:Auf die sich diese Erklärung bezieht, den folgenden Normen entsprechen:Auxquels la présente déclaration se rapporte, sont conformes aux normes suivantes

De machinerichtlijn: Following the provisions of Directive: Gemäß den Bestimmungen der Richtlinie:
Conformément aux dispositions de la Directive:
2006/95/EG

Directeur Valkenpower



B.A.H Valkenburg

Nederland, Maasbracht, 05-04-2018